

HYPERIONPLUS 936 & DRAGOPLUS 934

User Maintenance Manual/Handbook

Isothermal Technology Limited, Pine Grove, Southport, PR9 9AG, England Tel: +44 (0)1704 543830 Fax: +44 (0)1704 544799 Internet: www.isotech.co.uk E-mail: info@isotech.co.uk

The company is always willing to give technical advice and assistance where appropriate. Equally, because of the programme of continual development and improvement we reserve the right to amend or alter characteristics and design without prior notice. This publication is for information only.



CONTENTS

EMC INFORMATION	4
ELECTRICAL SAFETY	4
HEALTH AND SAFETY INSTRUCTIONS	5
GUARANTEE	
CAUTIONARY NOTE	
'DO'S AND DON'TS'	
UNPACKING AND INITIAL INSPECTION	
ELECTRICITY SUPPLY	
INTRODUCTION	
COMPARISON CALIBRATION	
Basic	
'Site' or Self-Contained Calibrators	
External Standards + Basic	
MODE OF OPERATION	
Metal Block Bath	
Stirred Liquid Bath	
Stirred Ice Bath - Hyperion Model Only	
Black Body Source	
Surface Sensor Calibration	
ITS-90 Fixed Point Calibration	
HOW TO MEASURE THE TRUE TEMPERATURE INSIDE THE AVAILABLE ACCESSORIES	13
THE CONTROLLER	
THE REFERENCE THERMOMETER	13
THE INDUSTRIAL THERMOMETER	
DRAGO SPECIFICATION	14
HYPERION SPECIFICATION	15
OPERATING THE PLUS MODEL	
FRONT PANEL LAYOUT	
The Temperature Controller	
Altering the SetpointADVANCED CONTROLLER FEATURES	
Setpoint Ramp Rate	
Monitoring the Controller Status	
The Temperature Indicator (Site (S) Models Only)	
Setting the Input Type	
Enabling / Disabling Custom Calibration	
Instrument Address	
Monitoring the Indicator Status	
Units	
Advanced Indicator Operation	
CALIBRATION DATA EXAMPLE	
CONNECTING A CURRENT TRANSMITTER (UP TO 20MA)	
SELECTING CONFIGURATION LEVEL	
TESTING THERMOSTATS	
USING THE PC INTERFACE	
Connections	23
CAL NOTEPAD	24



Development	24
Development	25
Protocol	25
Diagnostic Alarms	25
CONTROLLER ERROR MESSAGES	26
INITIAL TESTING	27
MAINTENANCE	28
FIGURE	29
FIGURE 2	30
APPENDIX I: INDICATOR CONFIGURATION (REFERENCE ONLY)	31
APPENDIX 2: ACCESSORIES PARTS LIST	33
APPENDIX 3	34



€EMC INFORMATION

This product meets the requirements of the European Directive on Electromagnetic Compatibility (EMC) 89/336/EEC as amended by EC Directive 92/31/EEC and the European Low Voltage Directive 73/25/EEC, amended by 93/68/EEC. To ensure emission compliance please ensure that any serial communications connecting leads are fully screened.

The product meets the susceptibility requirements of EN 50082-1, criterion B.

Symbol Identification	Publication	Description
\triangle	ISO3864	Caution (refer to manual)
<u> </u>	IEC 417	Caution, Hot Surface

A ELECTRICAL SAFETY

This equipment must be correctly earthed.

This equipment is a Class I Appliance. A protective earth is used to ensure the conductive parts cannot become live in the event of a failure of the insulation.

The protective conductor of the flexible mains cable which is coloured green/yellow MUST be connected to a suitable earth.

The blue conductor should be connected to Neutral and the Brown conductor to Live (Line).

Warning: Internal mains voltage hazard. Do not remove the panels.



! HEALTH AND SAFETY INSTRUCTIONS

- I. Read this entire manual before use.
- 2. Wear appropriate protective clothing.
- 3. Operators of this equipment should be adequately trained in the handling of hot and cold items and liquids.
- 4. Do not use the apparatus for jobs other than those for which it was designed, i.e. the calibration of thermometers.
- 5. Do not handle the apparatus when it is hot (or cold), unless wearing the appropriate protective clothing and having the necessary training.
- 6. Do not drill, modify or otherwise change the shape of the apparatus.
- 7. Do not dismantle the apparatus.
- 8. Do not use the apparatus outside its recommended temperature range
- 9. If cased, do not return the apparatus to its carrying case until the unit has cooled.
- 10. There are no user serviceable parts inside. Contact your nearest Isotech agent for repair.
- II. Ensure materials, especially flammable materials are kept away from hot parts of the apparatus, to prevent fire risk.
- 12. Ensure adequate ventilation when using oils at high temperatures.



GUARANTEE

This instrument has been manufactured to exacting standards and is guaranteed for twelve months against electrical break-down or mechanical failure caused through defective material or workmanship, provided the failure is not the result of misuse. In the event of failure covered by this guarantee, the instrument must be returned, carriage paid, to the supplier for examination and will be replaced or repaired at our option.

FRAGILE CERAMIC AND/OR GLASS PARTS ARE NOT COVERED BY THIS GUARANTEE

INTERFERENCE WITH OR FAILURE TO PROPERLY MAINTAIN THIS INSTRUMENT MAY INVALIDATE THIS GUARANTEE

RECOMMENDATION

The life of your **ISOTECH** Instrument will be prolonged if regular maintenance and cleaning to remove general dust and debris is carried out.

SOTECH

ISOTHERMAL TECHNOLOGY LTD PINE GROVE, SOUTHPORT PR9 9AG, ENGLAND

TEL: +44 (0) 1704 543830/544611

FAX: +44 (0)1704) 544799

The company is always willing to give technical advice and assistance where appropriate. Equally, because of the programme of continual development and improvement we reserve the right to amend or alter characteristics and design without prior notice. This publication is for information only.



⚠ CAUTIONARY NOTE

ISOTECH PRODUCTS ARE INTENDED FOR USE BY TECHNICALLY TRAINED AND COMPETENT PERSONNEL FAMILIAR WITH GOOD MEASUREMENT PRACTICES.

IT IS EXPECTED THAT PERSONNEL USING THIS EQUIPMENT WILL BE COMPETENT WITH THE MANAGEMENT OF APPARATUS WHICH MAY BE POWERED OR UNDER EXTREMES OF TEMPERATURE, AND ARE ABLE TO APPRECIATE THE HAZARDS WHICH MAY BE ASSOCIATED WITH, AND THE PRECAUTIONS TO BE TAKEN WITH, SUCH EQUIPMENT.



'DO'S AND DON'TS'

DO NOT handle the accessories when they are very hot or very cold.

DO NOT place hot or cold accessories back in the carrying case

DO NOT use the pocket designed for the black body source sensor to measure the temperature of the insert, stirred liquid bath or surface calibrator.

DO use that pocket for pre-warming, pre-cooling or storage.

DO NOT spill liquids inside the Isocal-6

DO NOT use liquids outside their recommended temperature range

DO NOT use viscous liquids, the stirring will be restricted and larger gradients will occur.

DO NOT mix liquids. If you are using different liquids make sure the calibrator is completely clean and dry before adding another liquid.

DO NOT worry if the black anodising gets discoloured or scratched. We can supply some special black touch up paint.

DO NOT rely on the controller to tell you the temperature of the insert or stirred liquid bath. Its job is only to provide an isothermal volume. It is the calibrated working standard that is used to measure actual temperature.

DO NOT calibrate very large sensors in the Isocal-6 unless you can accept large immersion errors. We have larger products for larger sensors.

DO NOT try to straighten the working standard, it is deliberately bent so that it does not interfere with the sensors you are calibrating.



UNPACKING AND INITIAL INSPECTION

Our Packing Department uses custom designed packaging to send out your unit, but as accidents can still happen in transit, you are advised, after unpacking the unit, to inspect it for any sign of shipping damage, and confirm that your delivery is in accordance with the packing note. If you find any damage, or that part of the delivery is missing please contact your nearest Isotech representative, and the carrier immediately. If the unit is damaged you should keep the packing for possible insurance assessment.



ELECTRICITY SUPPLY

Before connecting to the electricity supply please familiarise yourself with the parts of the manual relevant to your model.

Your unit's supply voltage requirement is specified on a plate on the instrument along with the serial number. All instruments will work on an electricity supply frequency of 50Hz or 60Hz. The apparatus is provided with an approved power cord. If the plug is not suitable for your location then the plug should be removed and replaced with an appropriate plug.

Take care to ensure the old plug is disposed safely.

The cable is colour coded as follows:

COLOUR
Green/Yellow
Brown
Blue
FUNCTION
Earth (Ground)
Live (Line)
Neutral

Please ensure that your unit is correctly connected to the electricity supply.

THE APPARATUS MUST BE CORRECTLY EARTHED (GROUNDED)



INTRODUCTION

Stirred liquid baths are suitable for temperature sensors of all types, shapes and sizes. Accuracies are much greater than those from Dry Blocks alone; with suitable reference thermometers performance of up to 0.005°C is achievable.

In addition to use as a liquid bath accessories these products are part of the Isocal-6 range allowing unprecedented flexibility for the calibration of temperature sensors. The Isocal-6 range may be used with the following options:

- I. As a Metal Block Bath
- 2. As a Stirred Liquid Bath
- 3. As a Stirred Ice Bath
- 4. A Black Body Source
- 5. A Surface Sensor Calibrator
- 6. An ITS-90 Fixed Point Apparatus

COMPARISON CALIBRATION

By definition, one compares industrial thermometers to a calibrated standard.

There are 3 methods commonly used:

Basic

Using the controller as the "calibrated standard" this method means that the complete bath is calibrated by comparing the controller reading to a calibrated standard placed in the bath.

This is a common method but is unsafe since the control sensor is

- a) inaccessible
- b) in the wrong place to give correct temperature of the insert

For these reasons it fails to satisfy ISO9000 and gives large uncertainties.

'Site' or Self-Contained Calibrators

In these an indicator and external calibrated sensor are used to measure the temperature of the calibration volume. This arrangement gives good accurate and reliable results. To recalibrate however it does mean sending the whole calibrator back to the calibration laboratory. Thus, the calibrator is self-contained, self-sufficient and meets ISO9000 requirements.

External Standards + Basic

Here a separate indicator and calibrated sensor are used to measure the calibration volume temperature. This can give the most accurate and reliable results, depending on the indicator.

It means that the calibrator does not need calibrating only the indicator and its calibrated sensor need re-calibration, but this option is more bulky, expensive and less portable than 2) above. It also meets ISO9000 requirements.



MODE OF OPERATION

Metal Block Bath

The metal block bath function of the Isocal-6 is well suited for fast, convenient, mess free calibration of temperature sensors.

The Isocal-6 metal insert is placed into the calibration well. The stir speed control should be set to the OFF position (turn fully anti-clockwise).

The thermometers under test are placed into suitable holes in metal. For the S models a calibrated reference probe should be placed into the insert and the actual temperature can be read from the temperature indicator. For the B models an external temperature indicator should be used.

For traceable calibration the actual value of the insert temperature should be recorded along with the values from the sensors under test.

Stirred Liquid Bath

The stirred liquid bath function of the Isocal-6 is well suited for odd shaped sensors which will not easily be accommodated in a metal insert.

Liquid baths have the added benefit of potential for greater accuracy due to better temperature uniformity and the avoidance of air gaps.

The liquid can be placed directly into the block. Take care not to spill any liquid and remove the mains power connector during filling. Placing the liquid directly into the block will provide the fastest response time and best agreement between the temperature of the oil and that indicated on the temperature controller. Take care not to overfill and allow room for the liquid to expand as it is heated. The maximum depth should be approximately 150mm.

Liquid containers can be used and will be particularly useful when more than one liquid type is to be used. Using one container for each liquid permits rapid mess free change of fluid.

The Isocal-6 Liquid Container is placed into the calibration well and the container is filled with a suitable liquid, for the temperature range that the bath is to be used over. The container should be filled to 40mm from the top of the tank. Care must be taken to adjust the level as the liquid contracts or expands with temperature changes. The stirrer speed control is set ON and to the mid position. If necessary the speed to can be adjusted to give the optimum value for a particular application, this position should be found experimentally and then noted for future use.

The thermometers under test are placed into the liquid. Two accessories are available to support the thermometers.

- a) The Thermometer Support this sits into either the calibration volume or the liquid container. The thermometers rest against the suspended lower plate.
- b) An optional cap is available which grips the thermometers; suspending them into the liquid. The cap has two diameters and can be fitted to the block or to the liquid container.

It is important that one of the accessories is used to prevent the probes from reaching the bottom of the tank which would stop the stirring action. For the S models a calibrated reference probe should be placed into the liquid and the actual temperature can be read from the temperature indicator. For the B models an external temperature indicator should be used. For traceable calibration the actual value of the liquid temperature should be recorded along with the values from the sensors under test.



Stirred Ice Bath - Hyperion Model Only

The Stirred Ice Bath function is as the Stirred Liquid Bath. The liquid container is filled with water, the stirrer speed control set to mid-position and the controller set to 0.0°C. Once the controller has stabilized at 0.0°C allow 10-15 minutes before starting calibration.

Black Body Source

The black body function of the Isocal-6 is well suited for fast, convenient, mess free calibration of infra-red temperature sensors.

The Isocal-6 black body target is placed into the calibration well. The stir speed control should be set to the OFF position.

The units under test should be aligned with the target.

For the S models a calibrated reference probe should be placed into the hole in the block and the actual temperature can be read from the temperature indicator to which the infra red thermometer(s) are compared. For the B models and external temperature indicator should be used.

Surface Sensor Calibration

The surface sensor function of the Isocal-6 is well suited for fast, convenient, mess free calibration of most surface temperature sensors.

The Isocal-6 surface sensor insert is placed into the calibration well. The stir speed control should be set to the OFF position.

A calibrated probe s placed in the pocket of the surface sensor insert and connected to the temperature indicator of the S models. For the B models an external indicator should be used. Surface sensors are placed on top of the insert and when stable compared to the calibrated probe.

ITS-90 Fixed Point Calibration

The ITS-90 fixed point function of the Isocal-6 is well suited for fast, convenient, mess free calibration of thermometers to uncertainties as low at 0.001° C.

The special cell is placed into the Isocal-6 calibration well. The stir speed control should be set to the OFF position. For detailed operating information, refer to the separate manual provided with the cell



HOW TO MEASURE THE TRUE TEMPERATURE INSIDE THE AVAILABLE ACCESSORIES

The controller of the Isocal-6 controls and reads the temperature of the block surrounding the 65mm by 160mm deep calibration well.

There are various accessories including the surface calibration insert, the oil container, black body etc. These adapt the Isocal-6 to perform varied calibration functions.

None of these accessories actually get to the block temperature and hence the controller's temperature because each accessory has a different immersion characteristic. For this reason the Isocal-6 like all comparison baths requires a reference thermometer to indicate the true temperature inside the accessory.

Remember the following:-

THE CONTROLLER

The controller is used to set a constant temperature and create an Isothermal environment for the comparison calibration of temperature sensors.

THE REFERENCE THERMOMETER

The Reference Thermometer is placed in the accessory or insert and measures the True Temperature inside the Insert or accessory.


THE INDUSTRIAL THERMOMETER

The Industrial Thermometer is placed in the accessory or insert and is compared to the True Temperature as indicated by the Reference Thermometer. An insert will typically have a 1% immersion error. For more details see - Depths of Immersion. Tavener J. P. Volume 9.2. Isotech Journal of Thermometry pages 79-87.



DRAGO SPECIFICATION

Drago^{PLUS} Performance - Dry Block

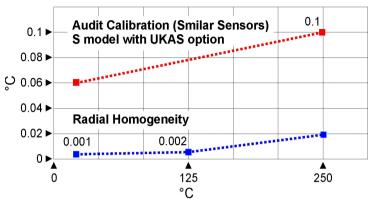


For Evaluation Reports, Uncertainty Budgets and Calculations with regard to EA10-13 UKAS etc, please contact Isotech - also http://www.isotech.co.uk/refer.html

MODEL NO.	Drago ^{PLUS} 934
TEMPERATURE RANGE	+30°C to +250°C (in an ambient of 25°C or below)
ABSOLUTE STABILITY	Stirred Liquid Bath ±0.025°C
	Dry Block Bath ±0.03°C Blackbody Source ±0.3°C
	Surface Sensor Calibrator ±0.5°C
	ITS-90 Fixed Point Apparatus ±0.0005°C
COMPUTER INTERFACE	Included with Windows Software
THERMAL	As a liquid comparison bath
PERFORMANCE	Uniformity down to $\pm 0.005^{\circ}$ C over the full range
CALIBRATION VOLUME	65mm diameter by 160mm deep
DISPLAY RESOLUTION	0.01 Up to 99.99
	0.1 100.0 to 250.0°C
	PC can display 0.01 across the whole range with the software included
INDICATOR UNITS	°C, °F, K
POWER	100 to 120V (50 / 60 Hz) or
	200 to 240V (50 / 60 Hz)
	1000 Watts
OVERALL DIMENSIONS	Height 302mm
	Width 176mm
	Depth 262mm
WEIGHT	8kg



HYPERION SPECIFICATION

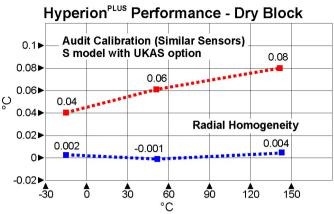


For Evaluation Reports, Uncertainty Budgets and Calculations with regard to EA10-13 UKAS etc, please contact Isotech - also http://www.isotech.co.uk/refer.html

MODEL NO.	Hyperion ^{PLUS} 936
TEMPERATURE RANGE	45°C below ambient to $+140^{\circ}\text{C}$ (absolute minimum - 45°C)
ABSOLUTE STABILITY	Stirred Liquid Bath ±0.025°C Ice/Water Bath ±0.001°C Blackbody Source ±0.3°C Surface Sensor Calibrator ±0.5°C ITS-90 Fixed Point Apparatus ±0.0005°C
COMPUTER INTERFACE	Included with Windows Software
THERMAL	As a liquid comparison bath
PERFORMANCE	Uniformity down to $\pm 0.005^{\circ}\text{C}$ over the full range
CALIBRATION VOLUME	65mm diameter by 160mm deep
DISPLAY RESOLUTION	0.01 -19,99 to 99.99 0.1 -55.0 to 20.0 and 100.0 to 140.0°C PC can display 0.01 across the whole range with the software included
INDICATOR UNITS	°C, °F, K
POWER	108 to 120V (50 / 60 Hz) or 208 to 240V (50 / 60 Hz) 200 Watts
OVERALL DIMENSIONS	Height 302mm Width 176mm Depth 262mm
WEIGHT	12kg



OPERATING THE PLUS MODEL

FRONT PANEL LAYOUT

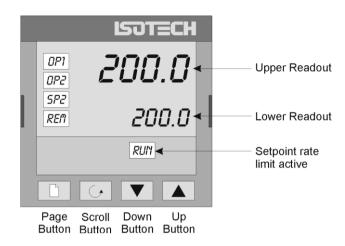

The Temperature Controller

The controller has a dual display, the upper display indicates the nominal block temperature, and the lower display indicates the desired temperature or setpoint.

Altering the Setpoint

To change the setpoint of the controller simply use the UP and DOWN keys to raise and lower the setpoint to the required value. The lower display changes to indicate the new setpoint.

ADVANCED CONTROLLER FEATURES

Setpoint Ramp Rate

By default the Dry Blocks are configured to heat (and cool) as quickly as possible. There may be some calibration applications where it is advantageous to limit the heating (or cooling rate).

An example might be when testing bimetallic thermostats; by forcing the Dry Block to heat at a controlled rate it is easier to determine the temperature at which the thermostat changes state.

The Dry Block can have its heating rate limited with the Setpoint Ramp Rate feature. This feature is accessed from the Scroll key. Depress the key until the display shows,

SPrr

On the Upper Display, the lower display will show the current value from OFF (default) to 999.9. The desired rate is set here with the UP and DOWN keys, the units are °C/min.

When the SPrr is active the controller display will show "RUN", the lower setpoint display will now automatically update with the current value, known as the working setpoint. The setpoint can be seen by pressing either the UP and DOWN key.

The Setpoint ramp rate operates when the bath is heating and cooling.



Instrument Address

The controller has a configurable "address" which is used for PC communications. Each instrument has an address; this allows several instruments to be connected in parallel on the same communications bus. The default value is 1. This address would only need to be changed if more than one Dry Block is connected to the same PC port.

To check the Address value press the scroll key until the top display indicates,

Addr

The lower display will show the current value that can be modified with the UP and DOWN keys.

Monitoring the Controller Status

A row of beacons indicate the controllers status as follows.

OPI Heat Output

OP2 Cool Output (Only for models which operate below 0°C)

REM This beacon indicates activity on the PC interface

For models fitted with cool down fans, such as the Calisto and Jupiter, the lower display will alternate between the setpoint and the message, IdHi. This message is not an error but is showing that the cooling fan is operating. It will automatically switch off when the temperature is within 5°C of the setpoint.

Units

Momentary pressing the Scroll key will show the controller units °C or °F.

The Temperature Indicator (Site (S) Models Only)

The site models include an electronic temperature indicator. The indicator can be configured for the desired sensor type, and for custom calibration data. The customer calibration data can be set ON or OFF.

Setting the Input Type

A 100 Ohm resistance thermometer can be connected to the PRT Connector or a thermocouple may be connected to the miniature TC Connector.



Ensure that only a PRT or a TC is connected at any one time. If a PRT and TC are connected simultaneously the indicator will read in error.

Check that any sensor placed into the Prototype Hyperion^{Plus} is suitable for the temperature range. Sensors can be damaged if taken outside their normal operating limits.

The desired sensor type is easily set, press the Scroll key until the upper display indicates,

inPt



On the upper display. The lower display will show the current set sensor type,

J.tc J thermocouple
K.tc K thermocouple
L.tc L thermocouple

r.tc R thermocouple (Pt/Pt13%Rh)
b.tc B thermocouple (Pt30%Rh/Pt6%Rh)

n.tc N thermocouple t.tc T thermocouple

S.tc S thermocouple (Pt/Pt10%Rh)

PL.2 PL 2 thermocouple

rtd 100Ω platinum resistance thermometer.

T012 E thermocouple

Again the value can be modified with the UP and DOWN keys.

Enabling / Disabling Custom Calibration

Custom calibration allows the indicator to be programmed to suit a particular temperature sensor. This allows the indicator to automatically show the true temperature, without having to manually apply a correction.

When the Custom or User Calibration is active the indicator will show the REM beacon lit continuously. The use of User calibration can make a significant difference to the accuracy of the instrument, and this REM beacon provides a clear and continuous indication of the calibration status. Isotech will configure and set user calibration when the Dry Block is ordered with a temperature sensor.

To alter the calibration status press the Scroll key until the upper display shows,

CAL

The lower display will indicate either, USEr for user calibration

Or

FACt for factory calibration of the indicator, i.e. User Cal OFF

Use the UP and DOWN keys to toggle between the two values.

When calibrating an unknown sensor against a calibrated probe it may be necessary to switch the calibration off for the unknown, and on for the calibrated probe.

Instrument Address

Like the controller, the indicator has a configurable "address" which is used for PC communications. Each instrument has an address; this allows several instruments to be connected in parallel on the same communications bus. The default value is 2 (The controller defaults to I). This address would only need to be changed if more than one Dry Block is connected to the same PC port.

To check the Address value press the scroll key until the top display indicates,

Addr

The lower display will show the current value that can be modified with the UP and DOWN keys.



Monitoring the Indicator Status

For the indicator the REM beacon is lit continuously when the user calibration is active, the REM beacon flashes when the PC communications port is active.

Units

Momentary pressing the Scroll key will show the controller units °C or °F.

Advanced Indicator Operation

The indicator can be configured with up to five custom calibration points; the points contain "data pairs". First the temperature (point) and secondly the Error (offset) at this temperature point. Isotech Dry Block calibration certificates will show the values to suit a particular sensor.

These values can be inspected, and modified with the following procedure,

Press the PAGE key until the display indicates,

ACCS LiSt

Press the SCROLL key until the display shows,

Goto

OPEr

Press the UP key until the display shows

Goto

conF

Press the Scroll Key twice, when the display will show,

inSt

Conf

Press the Page Key until the controller shows

CAL

Conf

Now use the Scroll key to examine the data pairs. The values can be modified with the UP and DOWN keys.

To exit this mode press the Page key until the top display shows,

Exit

And then set the lower display to YES. While in this mode take care not to modify other parameters - a full list of all the parameters can be found in appendix 2.



CALIBRATION DATA EXAMPLE


A maximum of five points may be entered, shown as Pnt I to Pnt 5 for the temperature point and Ofs I to Ofs 5 for the offset values.

The Pnt values must be entered in ascending order.

Set a Pnt to a value lower than the previous point to disable it.

The indicator would be programmed with the following data:

Pnt I 100	Ofs I	8.0
Pnt 2 300	Ofs 2	1.1
Pnt 3 500	Ofs 3	2.1
Pnt 4 -999	Ofs 4	0
Pnt 5 -999	Ofs 5	0

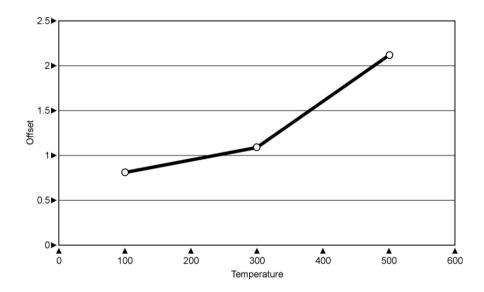




CONNECTING A CURRENT TRANSMITTER (UP TO 20MA)

The transmitter should be powered externally, a 2.49Ω current sense resistor is fitted internally and this allows the indicator to read mA.


- 1. From the input type menu select "mV".
- 2. Access configuration level.

SELECTING CONFIGURATION LEVEL

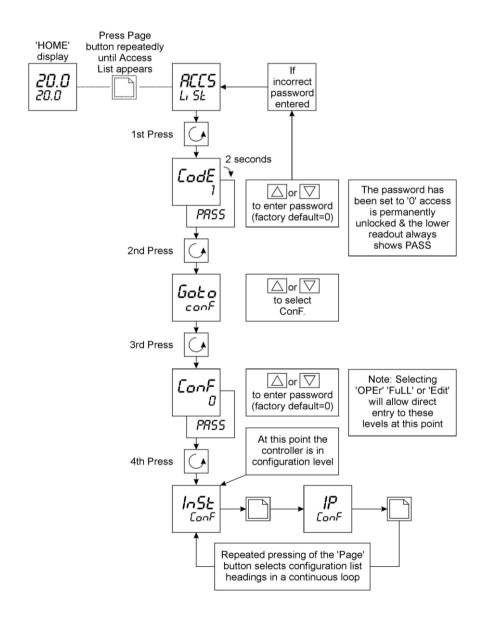




From the input menu iP set the inP.L, inP.H, VAL.L and VAL.H parameters to suit see table below:

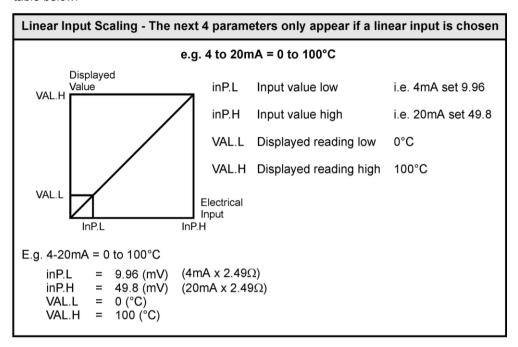

Exit config level by pressing PAGE key until the top display shows Exit, use the UP key to select YES, after two seconds the instrument will reset.

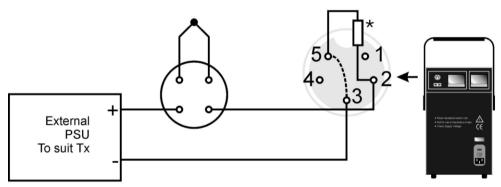

*2.49Ω resistor fitted internally (Pins 2 and 5). Link Pins 3 and 5 for transmitter inputs. Remove link for T/C's and PRT's. Socket Pins shown from Panel View

TESTING THERMOSTATS

The Site model can be used with the Isotech Cal Notepad software for the testing of thermostats and other thermal switches with volt free contacts. Cal Notepad can capture the temperature at which a switch opens or closes. It can also perform a hysteresis test. Refer to the Cal Notepad manual for details. Ensure only voltage free contacts are connected. Do not allow any voltage signal to be connected - doing so may damage the equipment and present a safety hazard.



USING THE PC INTERFACE

The PLUS models include an RS422 PC interface and a special converter cable that allows use with a standard RS232 port. When using the bath with an RS232 port it is essential that this converter cable is used. Replacement cables are available from Isotech, part number ISO-232-432. A further lead is available as an option, Part Number ISO-422-422 lead which permits up to 5 instruments to be daisy chained together.

The benefit of this approach is that a number of calibration baths may be connected together in a "daisy chain" configuration - and then linked to a single RS232, see diagram.



Note: The RS 422 standard specifies a maximum lead length of 1200M (4000ft). A true RS422 port will be required to realise such lead lengths. The Isotech conversion leads are suitable for maximum combined lead lengths of 10M that is adequate for most applications.

Connections

For RS232 use simply connect the Isotech cable.


RS422 Connections

Pin	Connection
4	Tx+ A
5	Tx- B
8	Rx + A
9	Rx- B
1	Common



CAL NOTEPAD

Cal Notepad can be used to log and display values from the Dry Blocks and an optional temperature indicator such as the milliK or TTI-10. The software requires Windows 9X, XP, a minimum of 5Mb of free hard drive space and free serial ports for the instruments to be connected.

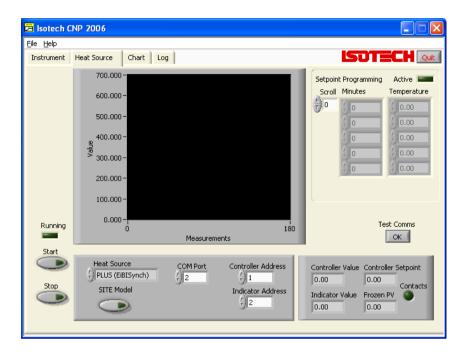

Development

Cal NotePad was developed by Isothermal Technology using LabVIEW from National Instruments. The license details are shown on the download page and in the Cal Notepad manual.



HOW TO INSTALL CAL NOTEPAD

- I. Download the ZIP from http://www.isotech.co.uk/downloads (7.6Mb)
- 2. Extract the files to a temporary folder
- 3. Run setup.exe



- 4. Follow the prompts which will install the application, a user manual with setup information and the necessary LabVIEW run time support files.
- 5. Should you ever need to uninstall the software then use the Add/Remove Programs option from the Control Panel.

Protocol

The instruments use the "Modbus Protocol"

If required, e.g. for writing custom software the technical details are available from our Document Library at http://www.isotech.co.uk

Diagnostic Alarms

These indicate that a fault exists in either the controller, indicator or the connected sensor.



CONTROLLER ERROR MESSAGES

The instruments include powerful diagnostics and in the unlikely event of an internal failure, or a sensor error, one of the following error messages may be displayed.

Display shows	What it means	What to do about it
EE.Er	Electrically Erasable Memory Error: The value of an operator or configuration parameter has been corrupted	For Controller: Contact Isotech For Indicator: Check Config Against Data in Appendix
S.br	Sensor Break: Input sensor is unreliable or the input signal is out of range.	For Controller: Contact Isotech For Indicator: Check a sensor is connected. Check that only a PRT or a TC is Connected (Not both)
HW.Er	Hardware error: Indication that a module is of the wrong type, missing or faulty	Contact Isotech
LLLL	Out of Display range, low reading	For Controller: Contact Isotech For Indicator: Check Sensor and Connections
НННН	Out of Display range, high reading	For Controller: Contact Isotech For Indicator: Check Sensor and Connections
Errl	Error 1: ROM self-test fail	Consult Isotech
Err2	Error 2: RAM self-test fail	Consult Isotech
Err3	Error 3: Watchdog fail	Consult Isotech
Err4	Error 4: Keyboard failure Stuck button, or a button was pressed during power up.	Switch the power off and then on without touching any of the controller buttons.
Err5	Error 5: Input circuit failure	Consult Isotech
Pwr.F	Power failure. The line voltage is too low	Check that the supply to the controller is within the rated limits



INITIAL TESTING

This unit was fully tested before despatch to you but please check its operation as outlined below.

After connecting to the electricity supply, the temperature controller display will show the temperature of the block and the last set-point value. The S controller and indicator both go through a self-test sequence first. The fan on the front panel should be heard running.

Change the set-point to 50° C and observe that the block temperature rises and settles to this value. For the S; place a thermometer in an insert in the block and connect it to the suitably configured indicator. Confirm that the indicator agrees within $\pm 2^{\circ}$ C of the controller.

Your unit should have performed as described above and can now be used for calibration.

If any problems or faults arise during these tests please contact us or our agents for help and advice.

IMPORTANT NOTICE

The controller's function settings are preset and will not require adjustment.



MAINTENANCE


Maintenance is limit to keeping the apparatus and the calibration volume clean and free from debris.

There are no internal user serviceable parts.

Repair and maintenance must be carried out by Isothermal Technology Limited or an approved agent.




FIGURE I

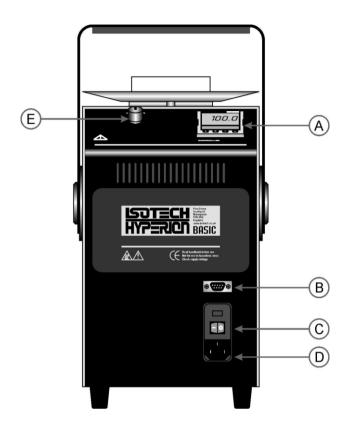

- A Temperature Controller
- B PC Interface
- C On/Off Switch
- D Power Entry and Fuse
- E Stir Speed Controller



FIGURE 2

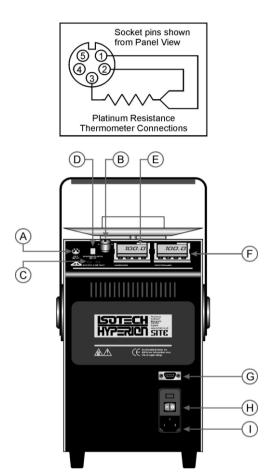

- A Platinum Resistance Thermometer Connector
- B Stir Speed
- C Switch Contact (Thermostat)
- D Thermocouple Connector
- E Temperature Indicator
- F Temperature Controller
- G Communications Connector
- H On/Off Switch
- I Power Entry and Fuse

Note: Only connect a thermocouple or platinum resistance thermometer to the input connectors. Ensure that only one sensor is connected at any time.



APPENDIX I: INDICATOR CONFIGURATION (REFERENCE ONLY)

Config.INST

Name	Description	Value
unit	Instrument Units	`C (0)
dEcP	Decimal Places in Display	NN.NN
CtrL	Control Type	PID (0)
Act	Control Action	REV (0)
COOL	Cooling Type	LIN (0)
PwrF	Power Feedback Enable	OFF (0)
Pdtr	Manual/Auto Transfer PD Control	NO (0)
FoP	Forced Output Enable	NO (0)
Sbrt	Sensor Break Type	SB.OP (0)
rnGH	Process Value High Limit	670
rnGL	Process Value Low Limit	0.00

Config.IP

Name	Description	Value
inPt	Linearisation Type	RTD
CJC	CJC Type	(EXT)
imP	Sensor break impedance	AUTO (I)

Config.CAL

Name	Description	Value
UCAL	User Calibration Enable	YES (I)
Pnt I	User Cal Point I	0
Pnt5	User Cal Point 5	-99.00
OFSI	User Cal Offset I	0.00
Pnt2	User Cal Point 2	-99
OFS2	User Cal Offset 2	0.00
Pnt3	User Cal Point 3	-99
OFS3	User Cal Offset 3	0.00
Pnt4	User Cal Point 4	-99.00
OFS4	User Cal Offset 4	0.00
OFS5	User Cal Offset 5	-99.00

Note: User Cal values are unique to each instrument. If available set values to those from calibration certificate.



Config.AL

Name	Description	Value
AL_I	Alarm I Type	OFF (0)
Ltchl	Alarm I Latching	NO (0)
AL_2	Alarm 2 Type	OFF (0)
Ltch2	Alarm 2 Latching	NO (0)
AL_3	Alarm 3 Type	OFF (0)
Ltch3	Alarm 3 Latching	NO (0)
AL_4	Alarm 4 Type	OFF (0)
Ltch4	Alarm 4 Latching	NO (0)

Config.HA

Name	Description	Value	
id	Module Identity	CMS (7)	
Func	Module Function	CMS (65)	
bAud	Baud Rate	9600 (0)	
Prty	Comms Parity	NONE (0)	
rES	Comms Resolution	FUL (0)	

Config. I A

Name	Description	Value	
id	Module Identity	LOG (3)	
Func	Module function	NONE (0)	
SEnS	Sense of Output	NOR (0)	

Config.2A

Name	Description	Value
id	Module Identity	LOG (3)
Func	Module function	NONE (0)
SEnS	Sense of Output	NOR (0)



APPENDIX 2: ACCESSORIES PARTS LIST

Stirred Liquid Bath	936-06-02	Includes a container, magnetic stirrer, probe guide and thermometer support kit
	936-06-08	Eight hole support kit, suspends up the 8 thermometers in range of 5-8mm
Metal Block Insert	936-06-01a	Standard Insert 8x8mm + 2x4.5mm diameter holes 157mm deep
	936-06-01b	Blank Insert
	936-06-01c	Special Insert - Consult Isotech
Black Body Target	936–06-03	Use with Standard Probe (935-14-61DB)
Surface Sensor Kit	936-06-04	Includes an insert and angled PRT
Fixed Point Cells	D8	Water Slim Cell
	17401 Slim	Gallium Slim Cell
Standard Probe	935-14-61DB	Platinum Resistance Thermometer
UKAS Calibration		UKAS Calibration available to order
Carrying Case	931-22-65	Sturdy Case accommodates the unit
Liquid	936-06-07	I Litre C10 Oil (-35°C to +140°C)
	580-06-09	I Litre C10 Oil (From ambient to 200°C)
	915/09	I Litre Very High Oil (150°C to 250°C)



APPENDIX 3

